



How to remove and insert the batteries



Talking Products Ltd
Unit C8 The Premier Centre
Abbey Park Industrial Estate
ROMSEY, Hampshire
SO51 9DG, ENGLAND

Tel: +44 (0) 1794 278327
Free Fax: +44 (0) 808 280 2507

Email: sales@TalkingProducts.com

www.TalkingProducts.com



TALKING TILES

Talking Tiles are high quality voice recorders that allow you to record and playback speech, music, and sound effects. Each Tile has a recording time of up to 80 seconds and a removable clear cover to add pictures, numbers, words or letters to match your recordings.

Please read the following instructions carefully.

How to record a message

You can record using either **a.)** the built-in microphone or **b.)** the AUDIO-IN socket, both located on the rear.

How to record using the microphone

Turn the tile upside down, place it on a flat surface and move the ON/OFF switch to the ON position.

Move the REC/PLAY switch to the REC position. Press down on the base and the red light will illuminate to indicate that recording has begun. Speak clearly into the microphone and release the base when you have finished recording.

NOTE: Ensure the base is held down so that the red light remains on whilst you are recording. You will hear a 'beep' sound to indicate recording has begun and then a second 'beep' to indicate recording has finished.

How to record using the AUDIO-IN socket

Turn the tile upside down, place it on a flat surface and move the ON/OFF switch to the ON position. Move the REC/PLAY switch to the REC position.

Locate the AUDIO-IN socket and use a 3.5mm Phono Plug Lead, (bought separately), to connect to the Earphone Socket of an audio device such as a CD Player, Computer or MP3 Player.

Play the audio from the input device. Press and hold the base down when you wish the recording to start and release when you wish the recording to stop.

NOTE: Ensure the base is held down so that the red light remains on whilst you are recording.

NOTE: For both methods of recording, you can only record one single 80 second message. You can re-record as many times as you wish, but the new recorded message will replace the previous one.

How to playback a message

Move the REC/PLAY switch to the PLAY position and turn the tile upright. Press down on the top of the tile once and release. If you wish to stop the playback at any time press down again.

Volume control and sound quality

You can adjust the playback volume by changing the distance you speak from the microphone. If you are recording via the AUDIO-IN socket, try adjusting the volume level on the input device.

Product Code:

TTH-80-xxx



Safety Information

1. Please keep the packaging and this document for future reference, it contains important information.
2. Not suitable for children under 3 years of age.
3. Non-rechargeable batteries are not to be charged.
4. Rechargeable batteries must be removed from the battery compartment before being charged.
5. Rechargeable batteries must only be charged under adult supervision.
6. Do not mix different types of batteries.
7. Do not mix old and new batteries.
8. Batteries must be fitted with the correct polarity.
9. Exhausted batteries must be removed from the battery compartment.
10. The power supply terminals must not be short-circuited.