

Instructions for RED 40 Second Talking Tin



How to record a message

1. Pull the tab on the rear side to activate the battery power. Hold the product in both hands with your thumbs over the two record buttons. See diagrams below.
2. Press down with your thumbs and the red light will illuminate to indicate that recording has begun. Ensure that both your thumbs remain pressed down so that the red light remains on whilst you are recording. Speak clearly at a distance of approximately 6 inches and release your thumbs when you have finished recording.
3. Press the PLAY button once to hear your message.

NOTE: This product will allow you to record one single 40 second message. You can re-record as many times as you wish. New recorded messages will replace the previous.

LOCK Switch

If you wish to protect the message you have recorded, slide the switch to the LOCK position. The LOCK switch will disable the recording function.

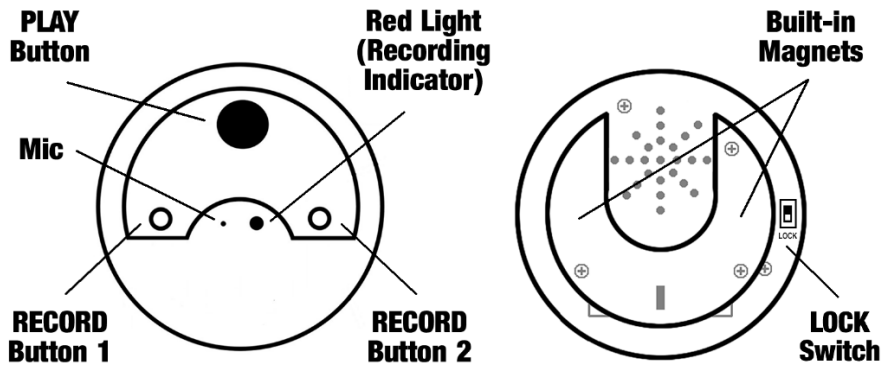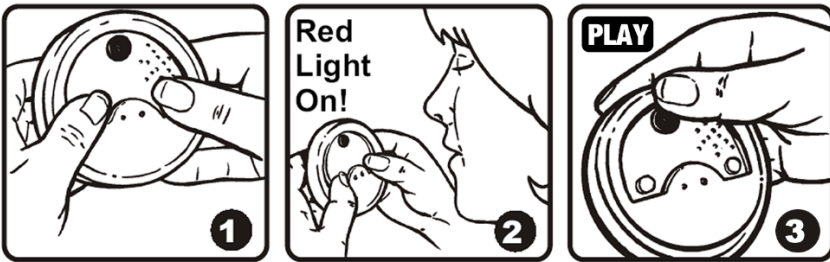

Part Code: TPD-40-RED

www.TalkingProducts.com




Battery Replacement

Please see diagrams below. Each Talking Tin requires three AG13, (LR44), Button Cell Batteries. One free set of batteries is supplied and fitted in each unit.

1. Remove the U shaped section by loosening the 3 screws.
2. Remove the screw holding the battery compartment cover.
3. Replace all three of the batteries with attention to the polarity.
4. Re-assemble in the reverse order.

You can purchase spare batteries from our web site, www.TalkingProducts.com Use Alkaline batteries only. Do not mix old and new batteries.

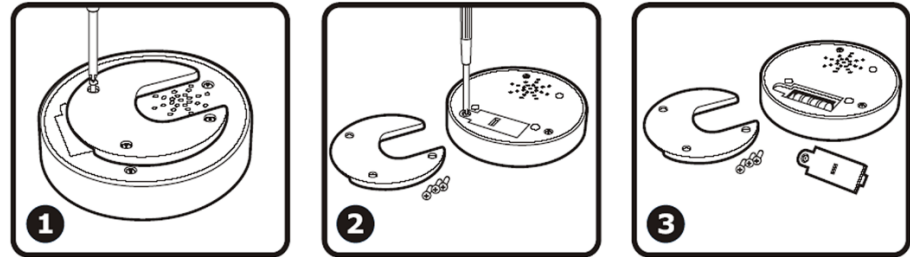

Accessories

Elastic Straps and Self-Adhesive Metal Adapters are available to purchase separately. These accessories will allow you to attach your Talking Tin to many other household items such as Bottles, Sprays and Storage Containers. More information about these accessories can be found on our web site.

