



Instruction Sheet

V1.0

Voice Pads are high quality voice recorders that allow you to record and playback speech, music, and sound effects.

Please read the enclosed instructions carefully and keep this document for future reference.

Product Code:

VP3-40-xxx


Volume control and sound quality

You can adjust the playback volume by altering the volume of your voice and changing the distance you speak from the microphone. Consider recording in a quiet place to avoid background noise.

Battery information

Rating : 1.5 volts x 3 (4.5 volts)
Type : Alkaline AAA x 3
Note : Correct polarity below.

How to insert batteries

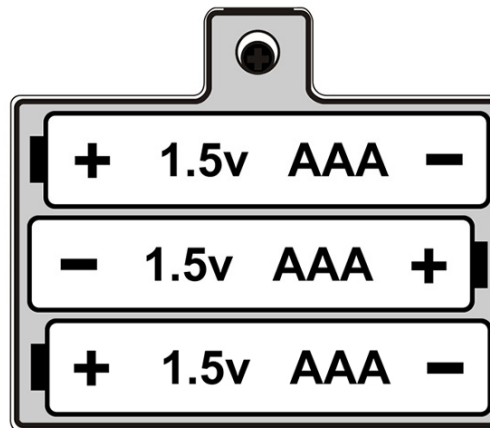

Safety information

1. Please keep this document for future reference.
2. Not suitable for children under 3 years of age.
3. Non-rechargeable batteries are not to be charged.
4. Rechargeable batteries must be removed from the battery compartment before being charged.
5. Rechargeable batteries must only be charged under adult supervision.
6. Do not mix different types of batteries.
7. Do not mix old and new batteries.
8. Batteries must be fitted with the correct polarity.
9. Exhausted batteries must be removed from the battery compartment.
10. The power supply terminals must not be short-circuited.



Talking Products Ltd
Unit C8 The Premier Centre
Abbey Park Industrial Estate
Romsey, Hampshire
SO51 9DG, England

Tel: +44 (0) 1794 278327

Email: sales@TalkingProducts.com

www.TalkingProducts.com

How to record a message

Move Power Switch to the ON position.

Press and hold the red RECORD Button and the red light will illuminate to indicate that recording has begun. Speak clearly into the microphone and release the button when you have finished recording.

NOTE: Ensure the button is held down so that the red light remains on whilst you are recording. You will hear a 'beep' sound to indicate recording has begun and then two 'beeps' to indicate recording has finished.

Your message can be up to 40 seconds long and can be re-recorded as many times as you wish. A new recorded message will replace the old one.

How to playback a message

Press the PLAY button once and release.

How to protect your message

You can protect your message from accidental erasure. Locate the LOCK switch hidden under the kick stand. To disable recording, move the switch to the left position.

NOTE: Your message will be preserved even when you replace the batteries.

